

Congratulations!! You have just purchased the best designed, manufactured, future inspired sails in the world. The Surflite Classic is a four batten sail specifically designed for smooth and stylish Windsurfing and Surf sailing. 6 mil X-ply is used for excellent weight/durability ratios. While the airframe is optimized by careful placement of four double tapered RBS Epoxy/Glass battens This makes a powerful smooth yet light sail. The Surflite Classic has been refined for over 14 years to provide you with its legendary performance and handling. Enjoy...

Troubleshooting:

Make sure you have a big enough sail for the conditions !


Sail Feels Underpowered- 1. Too much outhaul, ease outhaul out 1/2" to 1". 2. Mast is too long or too stiff. 3. Sail is too small.

Sail Feels Twitchy- 1. Too much outhaul, decrease outhaul 1/2" to 1".

Vertical Wrinkles on Batten Sleeves- 1. Tighten Autobatten 1/2" then sail 1 hour for tension to distribute. Repeat until wrinkles are gone. Do not overtension and create "s" curve in bottom batten.

Sail Overpowers Easily- 1. Too little downhaul, ease off outhaul 1/2". 2. Not enough outhaul, increase outhaul 1/2". 3. Sail is too big for conditions.

Sail Feels Heavy and Dead- 1. Not enough outhaul, increase outhaul by 1/2" to 1". 2. Try shorter lighter mast.

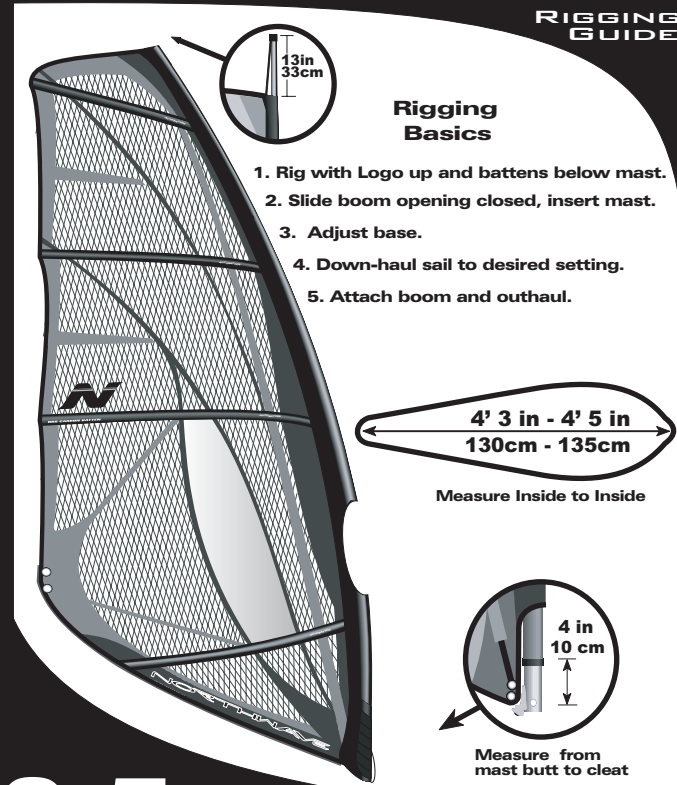

Rigging Basics

1. Rig with Logo up and battens below mast.
2. Slide boom opening closed, insert mast.
3. Adjust base.
4. Down-haul sail to desired setting.
5. Attach boom and outhaul.

2.5

Optimum Mast 340/22

**Need more information about any of our products?
Visit**

northwavesails.com

